

Embra Lamp Shade Installation

Tools Required

- No tools required

Hardware Required

- Embra Lamp Shade with integrated DC power cord
- M4 x 25mm thumb screw
- Washer, rubber 3/16" x 9/16" x 1/8" Black

Installation

- Unbox the End Cap table top, and locate the separate box holding the Lamp and the Listed Class 2 power supply.
- Note: This assembly instruction is for Lamp Shade attachment only. Reference separate assembly instructions for the attachment of Embra End Cap Table or Corner Table in their final configuration. This assembly instruction is only about attaching the Lamp Shade.

To Install the Lamp Shade:

1. Unpack the Lamp Shade and Listed Class 2 power supply. Lay the Lamp Shade on a soft surface to prevent damaging finished surface. Locate the Parts Bag with the Thumbscrews, Rubber Washers and a Rubber Grommet.
2. As shown in Figure A, for Embra product, the Lamp is installed to a solid Beech wood pole, and the cord is run through the center hole.
3. Unbundle the cord and push the quick disconnect plug and cord through the hole as shown in Figure A and B. Cord length was artificially shortened in Figure B for reference purposes.
4. Referencing Figure B for guidance, install the Lamp Shade to the pole. Ensure the cable is not crimped as the shade is fastened into position.
5. **NOTE:** Only use provided Thumbscrews to attach Lamp Shade to Pole.
6. Hand tightened thumbscrews. Slightly collapse rubber washers as Thumbscrews are tightened. Make sure Lamp Shade does not wobble side to side. Tighten thumbscrews until Lamp Shade is secure.

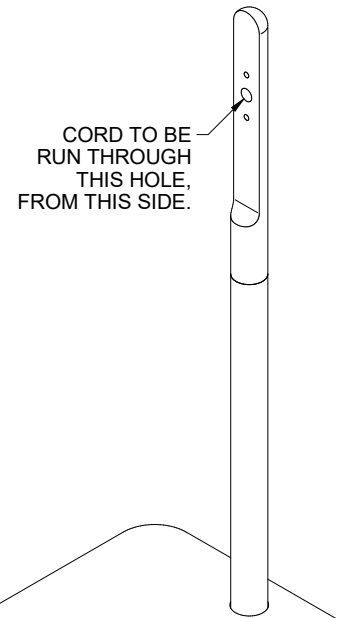


Figure A

Figure C

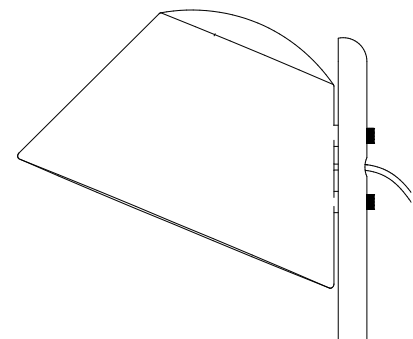


Figure D

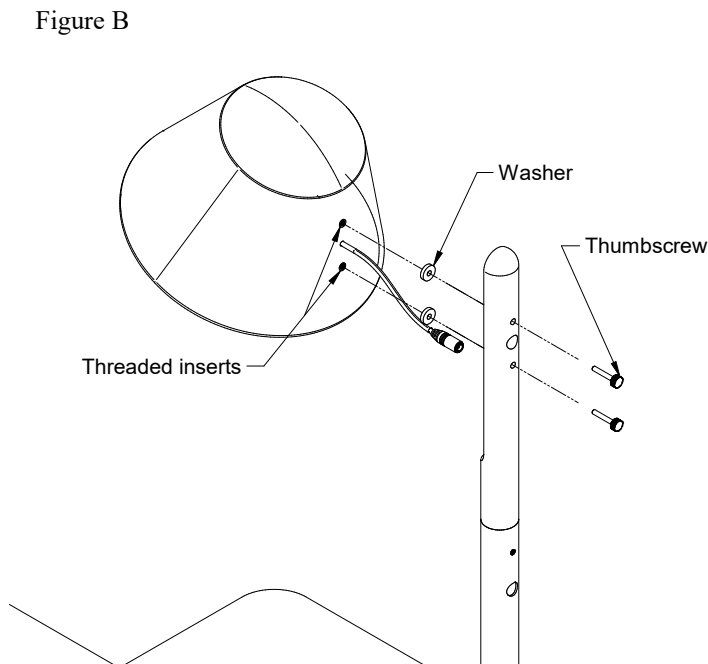
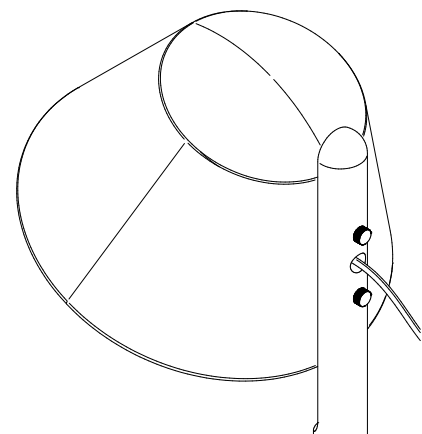


Figure B

Embra Lamp Shade Wire Routing

Running DC power cord through metal lamp tube:

1. After the Lamp Shade has been installed, locate the rubber hole grommet from the parts bag, if it hasn't been already. It will be round, with a slot all around the outside surface.
2. Taking care not to damage the quick disconnect plug, push the plug through the rubber grommet. See Figure E.
3. Making sure not to have the rubber grommet go inside the metal tube, slowly lower the plug and cord through the metal tube. See Figure F.
4. Install the rubber grommet to the metal tube. Starting on an edge of the round hole, and place the metal edge into the slot found on the outside edge of the grommet.
5. With the cord fully hanging out the bottom of the tube, connect the two halves of the quick disconnect. One plug is on the cord from the lamp shade, the other is on the Power Supply.
6. **NOTE:** Only use the Listed Class 2 Power supply provided in the Lamp shade kit. Using a different power supply brings risks of fire, electric shock, or injury.
7. Apply any wire management that is desired to the underside of the End Cap Table Top. See Figure H.

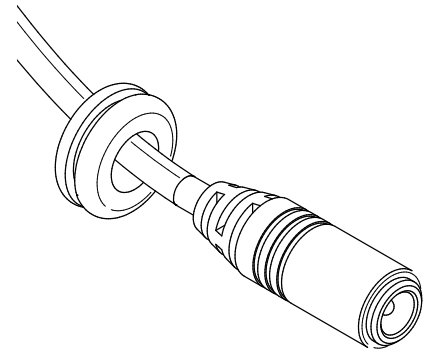


Figure E

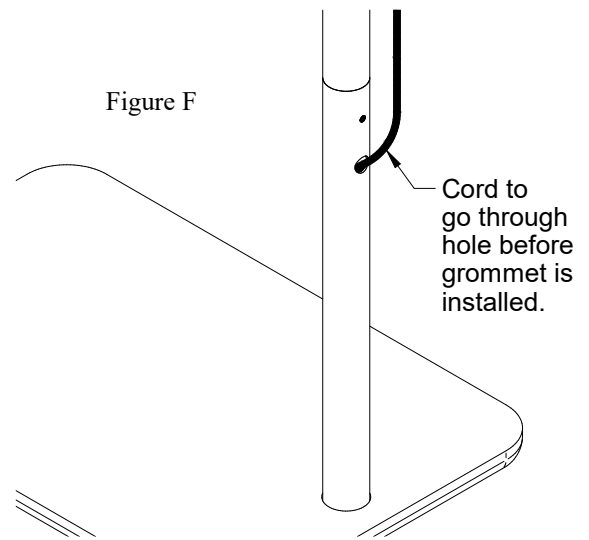


Figure F

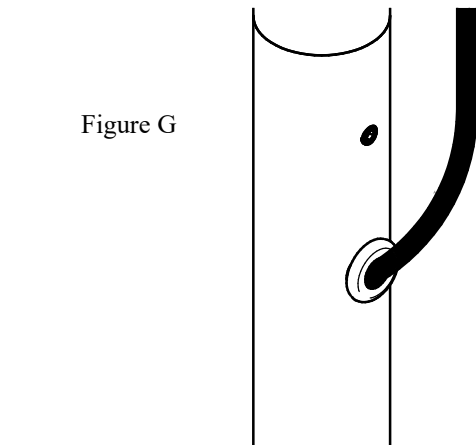


Figure G

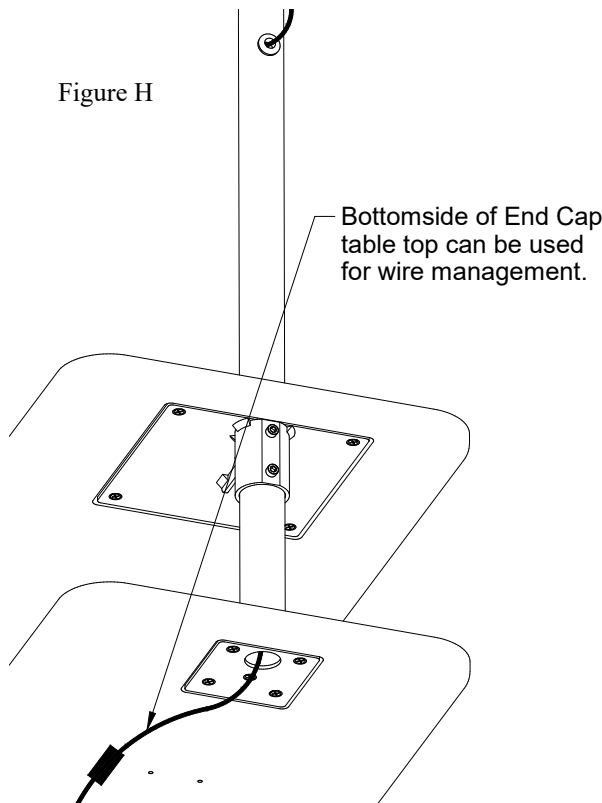


Figure H